

# AUTOSLIDE


## Pocket Door Mounting



Track & Plastic Spacer/Shim Closeup



Motor/Track Meet Closeup

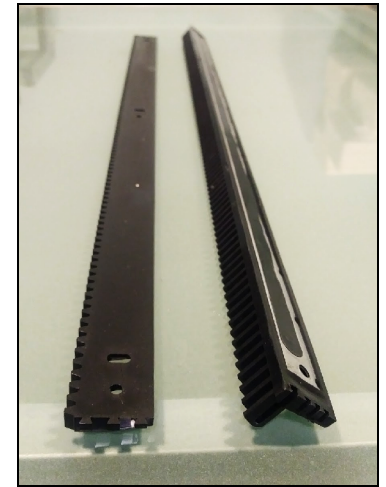

Pocket Door Track (left) vs. Standard Track (right)  
1.00" x 0.25" x 20.00"      0.85" x 0.65" x 20.00"



MultiDrive Unit mounted on Pocket Door with Slim Tracks (note the same mounting method applies to Standard or Elite units)

The AutoSlide can usually be mounted on a pocket door frame in two ways (depicted in the below diagrams). The left diagram depicts the standard mounting method, mounting over the sliding panel (clear opening). This method is shown in the pictures on this sheet. The right method of floor mounting is usually a last resort and is only recommended if another method isn't an option.

We offer (as alternatives to our standard tracks) slim pocket door tracks, which can be used to slide into tighter spaces (see the top right photo for comparison). To get these slim tracks with your unit, please email or call us (and wait for a reply) before you place your order, so we know to include them. Note that even if you get slim tracks, you'll likely still need to cut a notch in the stationary panel for the tracks to slide into when the door is opening (this notch can be seen in the top second from the right photo, where the track slides into the stationary panel).

In the event the tracks are unable to meet the motor due to the pocket door framing, shims may be needed, as shown in the top second from the left photo, to push out the tracks to meet the motor's wheel.

The AutoSlide is a versatile machine capable of automating a range of doors, including - with proper installation - your very own pocket door.

Pocket Door Info: <https://autoslide.com/autoslide-range/automatic-pocket-barn-doors/>  
Pocket Door Example Video: [https://youtu.be/fN3icln\\_kHc](https://youtu.be/fN3icln_kHc)

**AUTOSLIDE LLC - [autoslide.com](https://autoslide.com) - 833-337-5433**

